

Product Data Sheet

DIAION™ SA12AP

DIAION™ SA12AP is a gel type strongly basic anion exchange resin. It has a standard cross-linkages and anti-clumping characteristics. A wide range of applications, especially in a field of manufacturing and processing pure water in regenerable mixed bed, is recommended.

Product

Grade Name	DIAION™ SA12AP	
Type	Strong Base Anion	
Matrix	Styrene-DVB, Gel	
Functional Group	Type I (trimethyl ammonium groups)	
Ionic Form	Cl ⁻	

Specification

Whole Bead Count	-	90 min.
Salt Splitting Capacity	meq/mL	1.2 min.
Water Content	%	48 - 55
Particle Size Distribution on 1180 μm	%	5 max.
Particle Size Distribution thr. 300 μm	%	1 max.
Effective Size	mm	0.40 min.
Uniformity Coefficient	-	1.6 max.

Typical Properties

Shipping Density	g/L	660
Mean Particle Size	μm	660
Particle Density	g/mL	1.08
Total Swelling (Cl ⁻ to OH ⁻)	%	24

Recommended Operating Conditions

Maximum Operating Temperature	°C	80 (Cl ⁻) 60 (OH ⁻)
Operating pH Range		0 - 14
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	10 - 60
Regenerant		NaOH
Regenerant Concentration	%	NaOH 2 - 8
Regenerant Level	g/L	50 - 200
Regenerant Flow Rate	m/h	2 - 8
Total Rinse Requirement	BV	2 - 10

Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ SA12AP resin in normal down flow operation is shown in the graphs below.

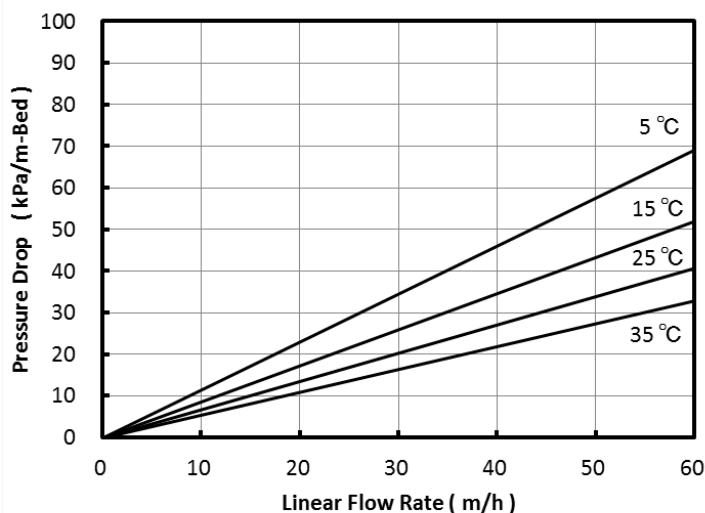


Fig. 1 Pressure Drop of SA12AP

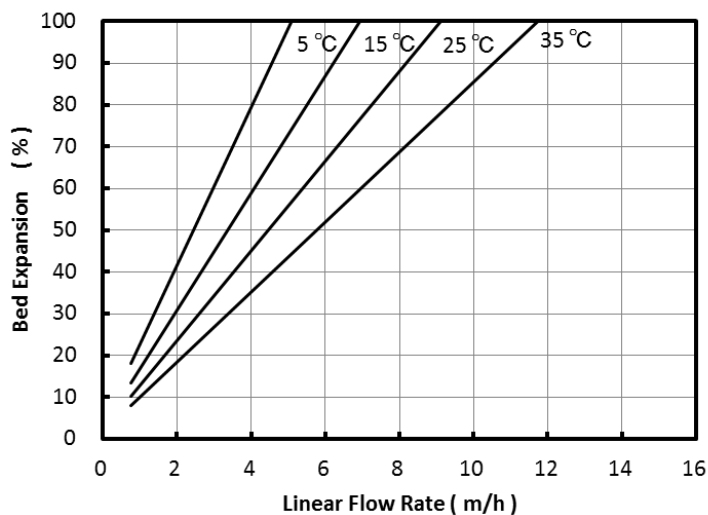


Fig. 2 Bed Expansion of SA12AP

Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.