

Product Data Sheet

DIAION™ UBK10B

DIAION™ UBK10B is a cation exchange resin with a uniform particle size. It has 10% cross-linkages and excellent properties. A wide range of applications, especially for condensate polishing in power plants, is recommended.

Product

Grade Name	DIAION™ UBK10B
Type	Strong Acid Cation
Matrix	Styrene-DVB, Gel
Functional Group	Sulfonic acid
Ionic Form	Na ⁺

Specification

Whole Bead Count	-	95 min.
Salt Splitting Capacity	meq/mL	2.2 min.
Water Content	%	35 - 45
Particle Size Distribution 500 - 850 μm	%	95 min.
Particle Size Distribution thr. 500 μm	%	1 max.
Mean Particle Size	μm	650 ± 50
Uniformity Coefficient	-	1.10 max.

Typical Properties

Shipping Density	g/L	850
Particle Density	g/mL	1.32
Total Swelling (Na ⁺ to H ⁺)	%	8

Recommended Operating Conditions

Maximum Operating Temperature	°C	120
Operating pH Range		0 - 14
Minimum Bed Depth	mm	450
Service Flow Rate	m/h	Fast Rinse 5 - 60 Condensate Polishing 40 - 150
Regenerant		HCl H ₂ SO ₄
Regenerant Concentration	%	HCl 4 - 8 H ₂ SO ₄ 1 - 10
Regenerant Level	g/L	30 - 150
Regenerant Flow Rate	m/h	1 - 10
Total Rinse Requirement	BV	3 - 6


Biokal

Chromatography & Purification Solutions

☎ +31529485928


 info@biokal.com
<https://www.biokal.com>

**MITSUBISHI
CHEMICAL**

Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ UBK10B resin in normal down flow operation is shown in the graphs below.

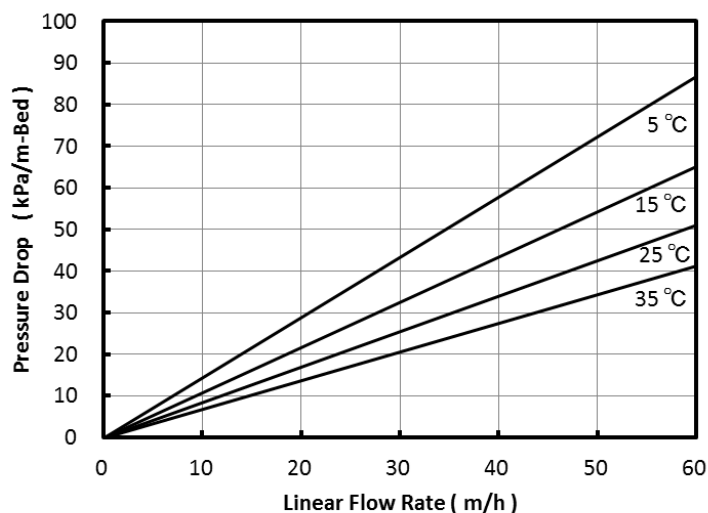


Fig. 1 Pressure Drop of UBK10B

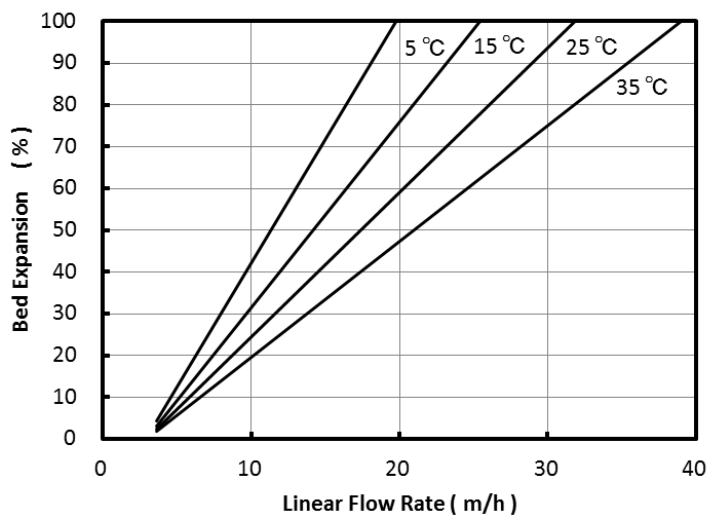


Fig. 2 Bed Expansion of UBK10B

Operational Capacity Data

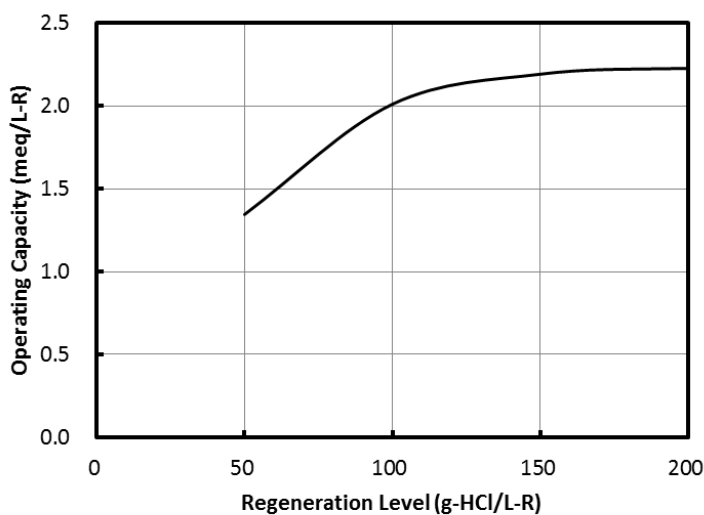


Fig. 3 Operational Capacity Data of UBK10B
Regenerant : 4 % HCl

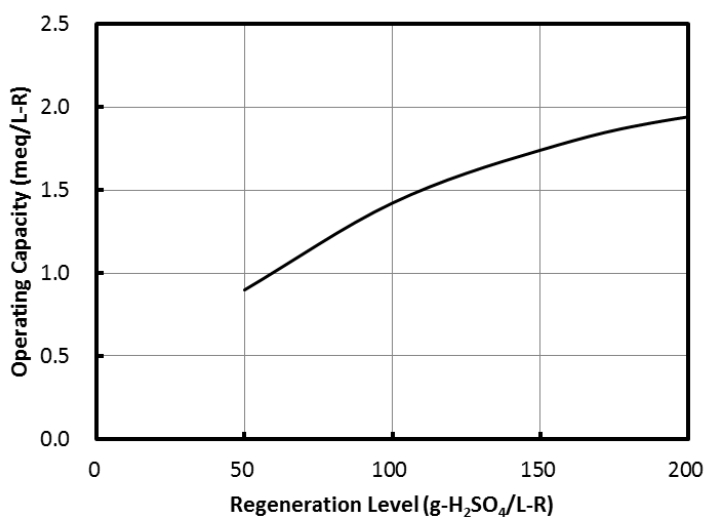


Fig. 4 Operational Capacity Data of UBK10B
Regenerant : 5 % H₂SO₄

Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.