

## Product Data Sheet

## Relite™ WK60L

Relite™ WK60L is an acrylic-type weakly acidic cation exchange resin. It has a higher total capacity than methacrylic type resins. A wide range of applications, especially in a field of dealkalization, demineralization and waste water treatment, is recommended.

## Product

Grade Name	Relite™ WK60L
Type	Weak Acid Cation
Matrix	Acrylic, Porous
Functional Group	Carboxylic Acid
Ionic Form	H <sup>+</sup>

## Specification

Whole Bead Count	-	95 min.
Total Capacity	meq/mL	4.4 min.
Water Content	%	45 - 52
Particle Size Distribution on 1180 μm	%	10 max.
Particle Size Distribution thr. 425 μm	%	5 max.
Effective Size	mm	0.45 min.
Uniformity Coefficient	-	1.6 max.

## Typical Properties

Shipping Density	g/L	770
Mean Particle Size	μm	710
Particle Density	g/mL	1.20
Total Swelling (H <sup>+</sup> to Na <sup>+</sup> )	%	58

## Recommended Operating Conditions

Maximum Operating Temperature		120
Operating pH Range		4 - 14
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	5 - 40
Regenerant		HCl
Regenerant Concentration	%	HCl 1 - 5
Regenerant Level	% of ionic load	110
Regenerant Flow Rate	m/h	2 - 6
Total Rinse Requirement	BV	10 - 20


**Biokal**

© +31529485928

Chromatography &amp; Purification Solutions


 info@biokal.com  
<https://www.biokal.com>

**MITSUBISHI  
CHEMICAL**

## Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of Relite™ WK60L resin in normal down flow operation is shown in the graphs below.

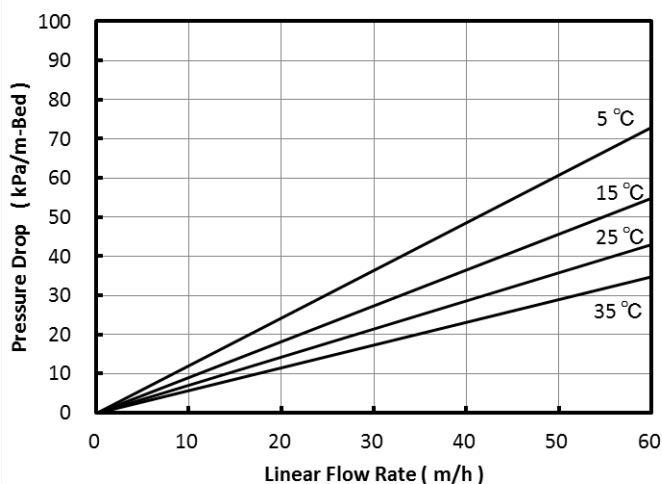


Fig. 1 Pressure Drop of WK60L

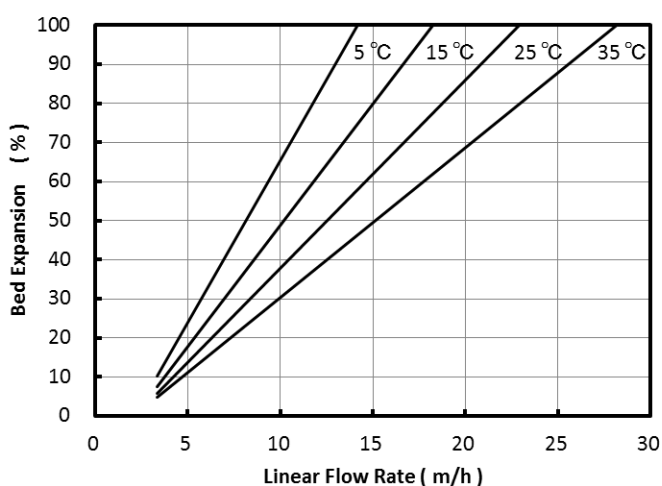


Fig. 2 Bed Expansion of WK60L

## Notice

DIAION™ is a registered trademark of Mitsubishi Chemical Corporation. The information contained herein is believed to be true and accurate, but all data, recommendations and suggestions are provided without guarantee, since the conditions of use are beyond our control and can affect the performance and properties of our products. The user is solely responsible for confirming that our product is suitable for the intended end use, and for compliance with all legal regulations and patents. Other than compliance with published Mitsubishi Chemical Corporation specifications agreed to pursuant to a signed writing during the warranty period, and except as required by law, MITSUBISHI CHEMICAL CORPORATION AND ITS AFFILIATES MAKE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTY ARISING OUT OF A COURSE OF DEALING, CUSTOM OR USAGE OF TRADE. If a product is found to be defective during the warranty period, user's sole remedy and our sole obligation is, at our option, replacement of the affected product or refund of the purchase price. Except as required by law, we are not liable for any damage, harm or loss resulting from our product, whether direct, indirect, consequential, incidental or special, and irrespective of legal theory asserted, including strict liability, contract, warranty, or negligence.

