

Product Data Sheet

DIAION™ SAF12A

DIAION™ SAF12A is a gel type strongly basic anion exchange resin. It has a standard cross-linkages and low-odor and low leachable properties. A wide range of applications, especially in a field of manufacturing drinking water and refining sugar liquors, is recommended.

Product

Grade Name	DIAION™ SAF12A	
Type	Strong Base Anion	
Matrix	Styrene-DVB, Gel	
Functional Group	Type I (trimethyl ammonium groups)	
Ionic Form	Cl ⁻	

Specification

Salt Splitting Capacity	meq/mL	1.2 min.
Water Content	%	48 - 55
Particle Size Distribution on 1180 μm	%	5 max.
Particle Size Distribution thr. 300 μm	%	1 max.
Effective Size	mm	0.40 min.
Uniformity Coefficient	-	1.6 max.
Amine Effluent	ppb	20 max.

Typical Properties

Shipping Density	g/L	680
Mean Particle Size	μm	640
Particle Density (Cl ⁻)	g/mL	1.08
Total Swelling (Cl ⁻ to OH ⁻)	%	24

Recommended Operating Conditions

Maximum Operating Temperature	°C	80 (Cl ⁻) 60 (OH ⁻)
Operating pH Range		0 - 14
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	10 - 60
Regenerant		NaOH
Regenerant Concentration	%	NaOH 2 - 8
Regenerant Level	g/L	50 - 200
Regenerant Flow Rate	m/h	2 - 8
Total Rinse Requirement	BV	2 - 10


Biokal

Chromatography & Purification Solutions

☎ +31529485928


 info@biokal.com
<https://www.biokal.com>

**MITSUBISHI
CHEMICAL**

Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ SAF12A (CI form) resin in normal down flow operation is shown in the graphs below.

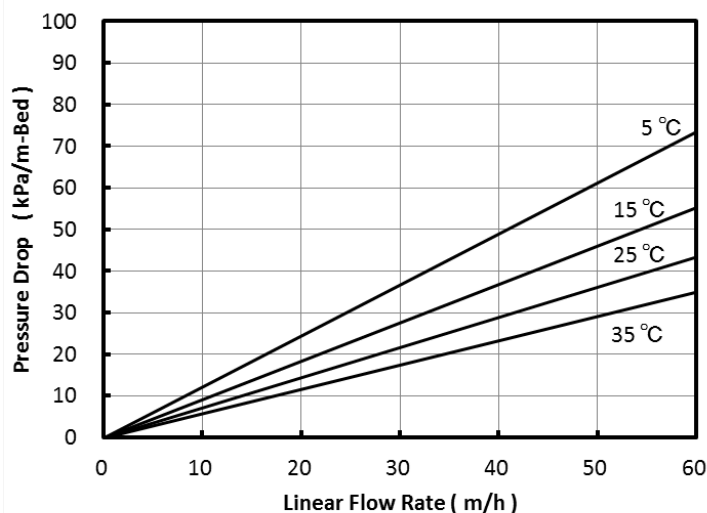


Fig. 1 Pressure Drop of SAF12A

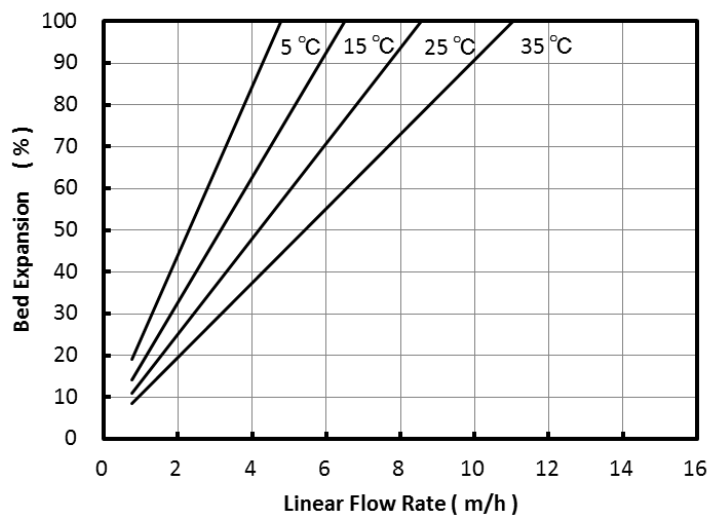


Fig. 2 Bed Expansion of SAF12A

Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.